



Sanitation Station Assembly Instructions.



STEP 1

Your dispenser station should arrive in 2 parts, the stand portion, and the dispenser. Remove the stand from the box as shown and proceed to remove the protective packaging.



STEP 2

Using the large black bolt, and an alan key, or compatible drill bit tighten the bolt through the bottom of the stand into the pole. Once tight, the unit should be able to stand on its own.



STEP 3

Now that the stand has been assembled, remove the dispenser portion from the box. The first step is to slightly loosen the two screws on the bottom of the dispenser – see image.



STEP 4

With the two screws loosened, the top metal shroud on the dispenser should slide forward. This will allow the plastic backing plate on the dispenser to slide down. You will attach the plastic backing plate to the stand on its own.



STEP 5

Using two of the bolt/nuts that came in the box with the stand mount the plastic backing plate to the stand, using the two holes at the top center. You will need a Philips head screwdriver and an adjustable wrench. *note* you will not need 2 of the bolt/nuts, nor will you need the screws that came in the box with the dispenser





Sanitation Station Assembly Instructions continued.


STEP 6

Once the plastic backing plate is securely mounted on to the stand, take the remaining part of the dispenser and it should slide back onto the plate you have just secured to the stand. Make sure to apply some pressure to the top metal shroud so that it is snugly down on the backing plate.



STEP 7

With the dispenser firmly mounted onto the plastic backing plate, you should now be able to slide the metal shroud on the dispenser back so that it is tight to the dispenser stand. With it firmly pushed back, you will now need to re-tighten the two screws – see image.

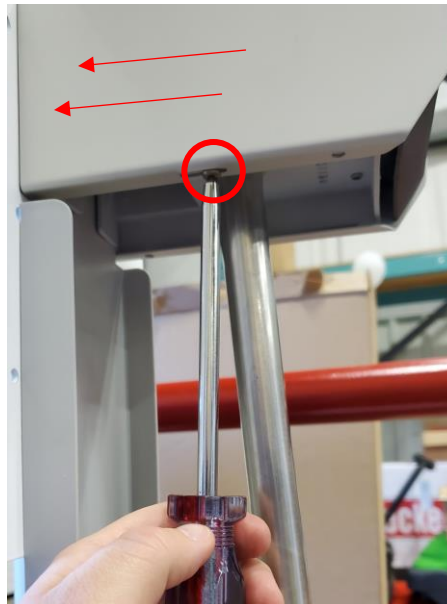

STEP 8

The dispenser station is now assembled, you can slide the jug of sanitizer up the draw tube, and it will rest on the bottom metal plate!

